



EN

## What are the panels made of?

The kitchen panels are made of 4 mm thick tempered glass Float, resistant to moisture, scratches, and damage. They are perfect for kitchens and bathrooms. Avoid installing them in places exposed to prolonged intense sunlight to prevent fading.

## Before starting installation

Ensure that the wall where the panel will be mounted is even and stable, allowing for proper attachment of the brackets. The wall should be capable of supporting the panel's weight—if in doubt, choose appropriate anchors or consult a specialist. The wall must also be free of major damage, such as cracks or voids, which could affect the durability of the installation.

## Step-by-step instructions

**1.** Measure and mark the locations for the point brackets on the wall, maintaining symmetry and level. **2.** Use a drill bit suited to the anchors (e.g., 6 mm), drilling holes approximately 35-40 mm deep. **3.** Insert the anchors into the holes and secure the point brackets, tightening the screws evenly. **4.** Place the panel on the brackets, ensuring it is level. **5.** Gently tighten the brackets to secure the panel, avoiding excessive pressure that could damage the glass.

## Cleaning and maintenance

Clean the panel with a soft cloth and a mild cleaning agent, such as glass cleaner. Avoid using aggressive chemicals or sharp tools to prevent damage to the surface.

### **IMPORTANT! Take precautions when using the product.**

Special precautions should be taken to safely dispose of this product. The product is made of glass—handle it carefully to avoid breaking or damaging it. Do not place the product in areas exposed to intense vibrations or shaking, as this may cause it to fall. Installation must be carried out on a stable and properly prepared surface using the included mounting elements. Keep away from children—there is a risk of injury if the panel falls or breaks. The set contains small parts, such as screws and anchors, which may pose a choking hazard. Do not disassemble or modify the panel. If the glass is damaged (cracks, chips), immediately stop using the product. When moving the panel, use only its edges—avoid gripping the mounting elements or other accessories. Failure to follow these recommendations may result in product damage or personal injury.

